



HRV-KRISS110(2019) KZ-KRISS110(2019)


HEAVYDUTY ADVANCE RACK MODENAS KRISS 110 2019

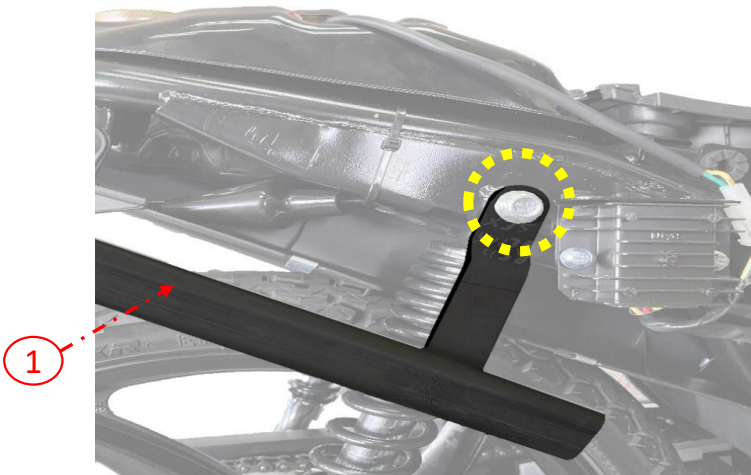

1 Dismantle rear cover set & rear handle.
Install rack at rear absorber by using original screw.

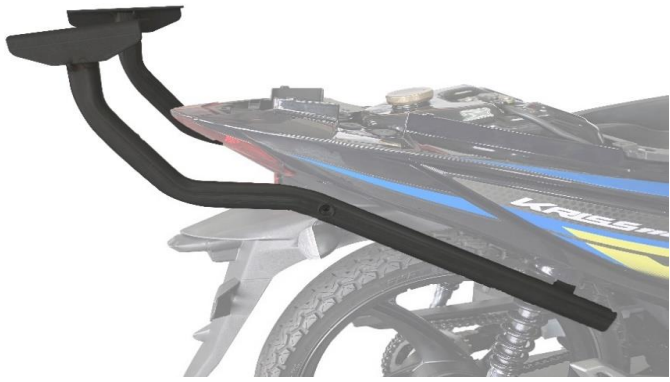


2 Reinstall the rear cover set.

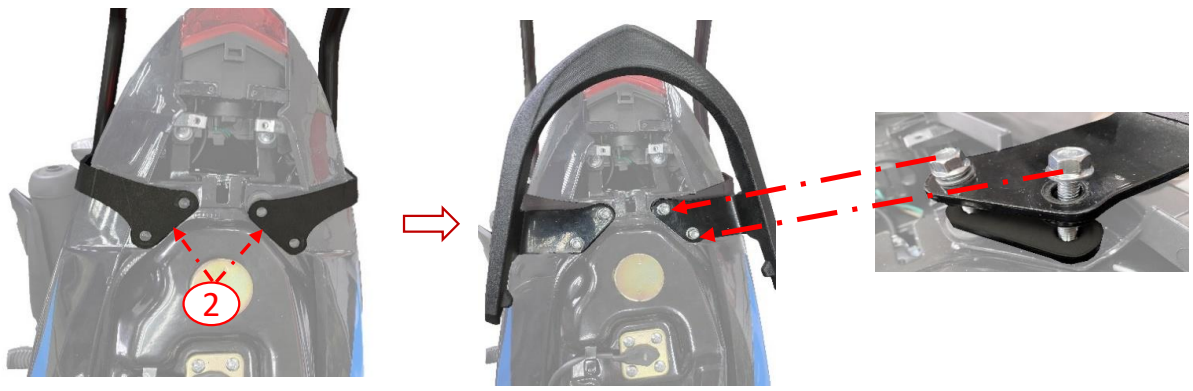

3 Install support and rear handle accordingly by using original screw.

HRV-KRISS110(2019) KZ-KRISS110(2019)

HEAVYDUTY ADVANCE RACK MODENAS KRISS 110 2019

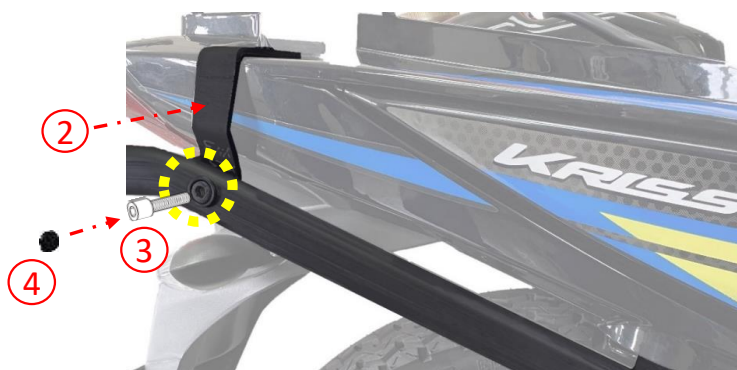

4

Attach rack to support by using given screw






5

Install base plate and tight all the screws.

WARNING

Once you have finished the coupling, check that the plate is fully horizontal.

| No. | Parts Description | Quantity (pcs) |
|-----|---|---|
| 1 | HR MODENAS KRISS 110 2019 (Part No. HR210(L) & HR210(R)-PC) | 1 PAIR |
| 2 | HR MODENAS KRISS 110 2019 SUPPORT (Part No.HRSJ210(L/R)-PC) | 2 PCS |
| 3 | M8 ALLEN CAP SCREW (Part No. M8X25AC(BZ)) |  2 PCS |
| 4 | M8 CAP (Part No. Z801) |  2 PCS |
| 5 | BASE PLATE (Part No:M5M / M5MK) |  1 SET |

MOUNTING INSTRUCTIONS