


# HRV-EVO Z 125R

## HEAVYDUTY ADVANCE RACK DEMAK EVO Z 125R



**1** Dismantle rear cover set and cut 30mm at rear mudguard.

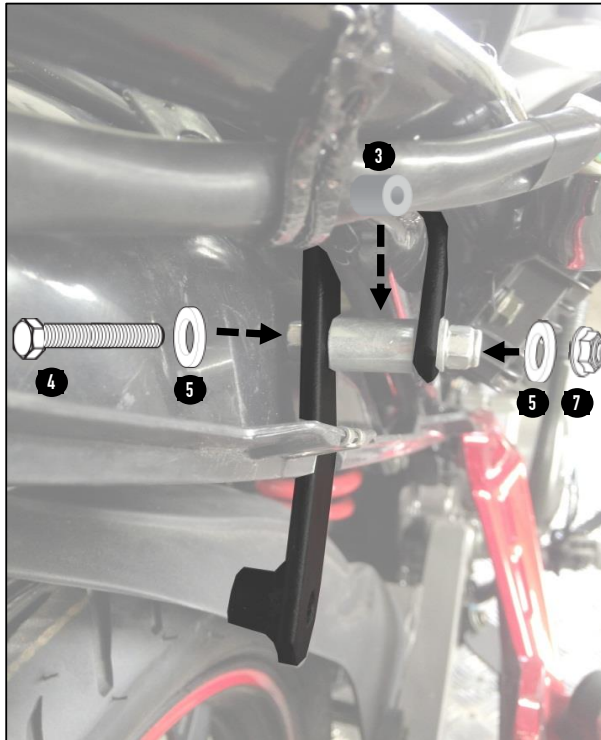


**2** Install support

### MOUNTING INSTRUCTIONS

# HRV-EVO Z 125R

## HEAVYDUTY ADVANCE RACK DEMAK EVO Z 125R

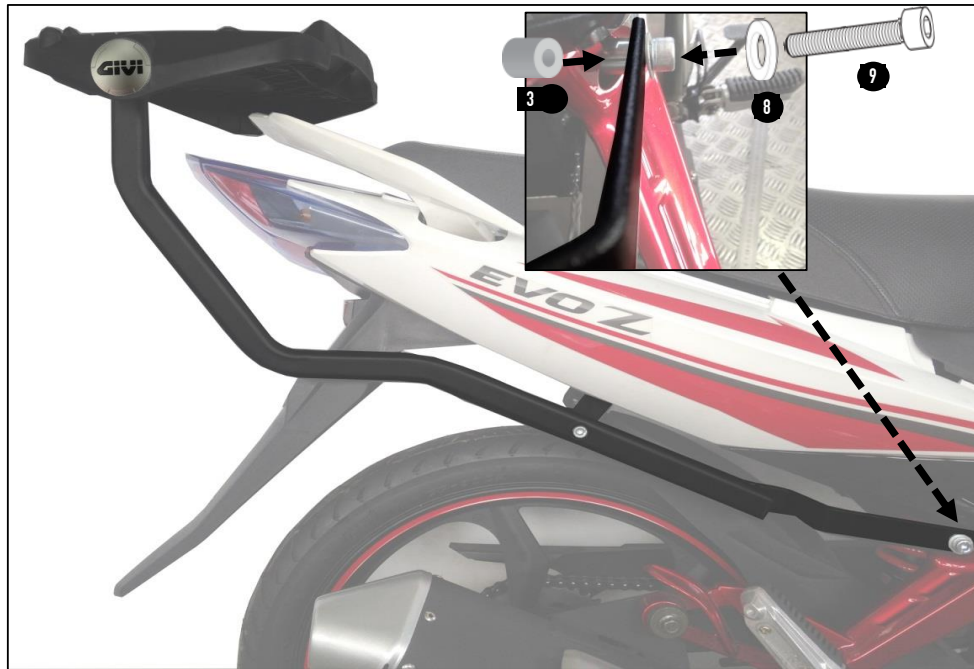

**3**

**Install base plate and tight all the screw.**

### WARNING

Once you have finished the coupling,  
check that the plate is fully horizontal.

No.	Parts Description	Quantity (pcs)
1	MONORACK( Part No.WR156 R & L)	1 PAIR
2	SUPPORT ( Part No. WRSJ156L/R )	2 PCS
3	COLLAR ( Part No. C1411 )	4 PCS
4	M6 HEXAGON SCREW ( Part No. M6X45HEX )	2 PCS
5	M6 WASHER ( Part No. WP6X1.5X14 )	4 PCS
6	M8 ALLEN CAP SCREW ( Part No. M8X30AC )	2 PCS
7	M6 LOCKNUT ( Part No. M6LN )	2 PCS
8	M8 WASHER ( Part No. WP8X18 )	2 PCS
9	M8 ALLEN CAP SCREW ( Part No. M8X50AC )	2 PCS
10	M8 CAP (Part No. Z801 )	2 PCS
11	BASE PLATE ( Part No. M5M / M5MK )	1 SET

### MOUNTING INSTRUCTIONS