



HRV-SPORT RIDER 125I

HEAVYDUTY ADVANCE RACK SYM SPORT RIDER 125I

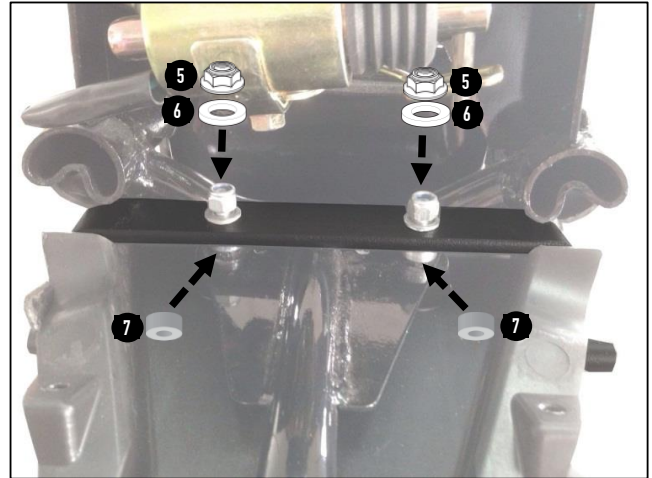

1 Dismantle rear cover set and install rack at rear absorber
(use back original bolt)

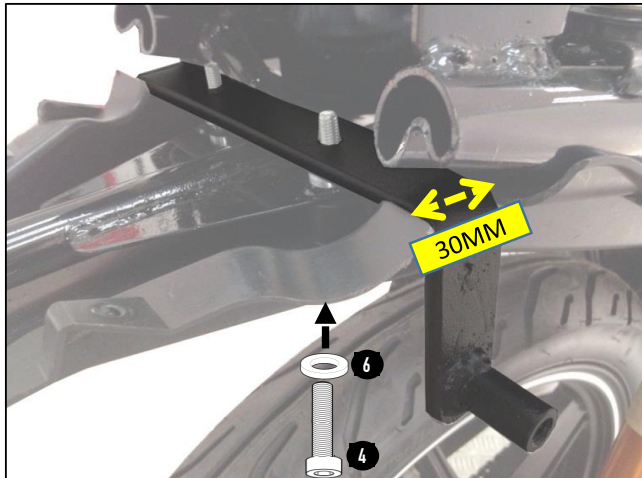

2 Install support and cut 30mm at rear mudguard

MOUNTING INSTRUCTIONS

HRV-SPORT RIDER 125I

HEAVYDUTY ADVANCE RACK SYM SPORT RIDER 125I








3

Install base plate and tight all the screw.

WARNING

Once you have finished the coupling,
check that the plate is fully horizontal.

No.	Parts Description	Quantity (pcs)
1	MONORACK(Part No.PW0161L & R)	1 PAIR
2	SUPPORT (Part No. PWSJ161L/R)	1 PCS
3	M8 ALLEN CAP SCREW (Part No. M8X20AC)	 2 PCS
4	M6 ALLEN CAP SCREW (Part No. M6X30AC)	 2 PCS
5	M6 LOCKNUT (Part No. M6LN)	 2 PCS
6	M6 WASHER (Part No. WP6X1.5X14)	 4 PCS
7	COLLAR (Part No. C1402)	 2 PCS
8	M8 CAP (Part No. Z801)	2 PCS
9	BASE PLATE (Part No. M5M / M5MK)	1 SET

MOUNTING INSTRUCTIONS